


## **MicArray wiring instructions**


1. First connect the 10pin Dupont cable to the pin header of the MicArray microphone array, it is best to insert them in order, so that the corresponding symbol of each line is easily recognized.

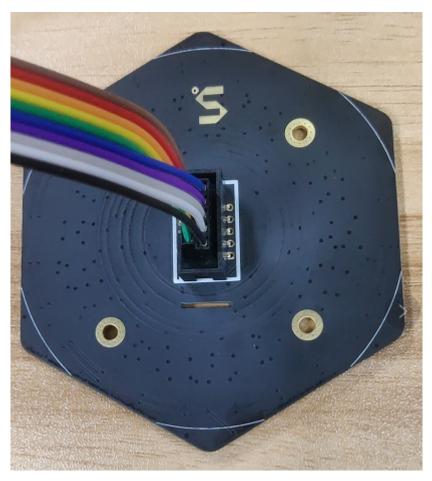


2. The wiring method is shown in the figure below.

MicArray—- <mark>MaixBit</mark>	MicArray—-MaixBit
LED_CK <mark>1025</mark>	LED_DA <mark>1024</mark>
MIC_D0 <mark>l023</mark>	MIC_D1IO22
MIC_D2 <mark>lO21</mark>	MIC_D3 <mark>IO20</mark>
MIC_WS <mark>IO19</mark>	MIC_CKIO18
VIN5V	GNDGND



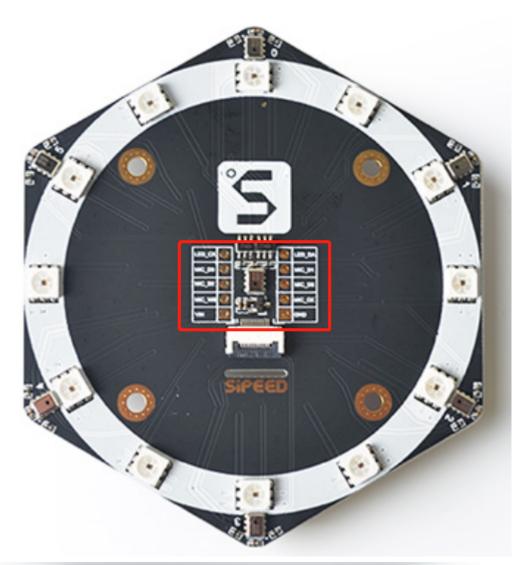

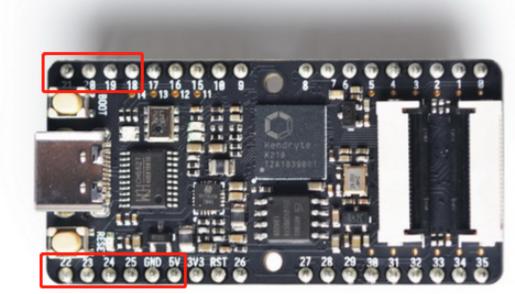



## 3. Connect display

